


Shutter Tensioning Guidelines



Step 1: Ensure louvers are fully closed in the upwards position when tensioning.



Step 2: Use the correct screw driver per the screw type that the panel is equipped with. (Different types of screws are used)
Use either a #2 square head bit OR a #2 Phillips head.

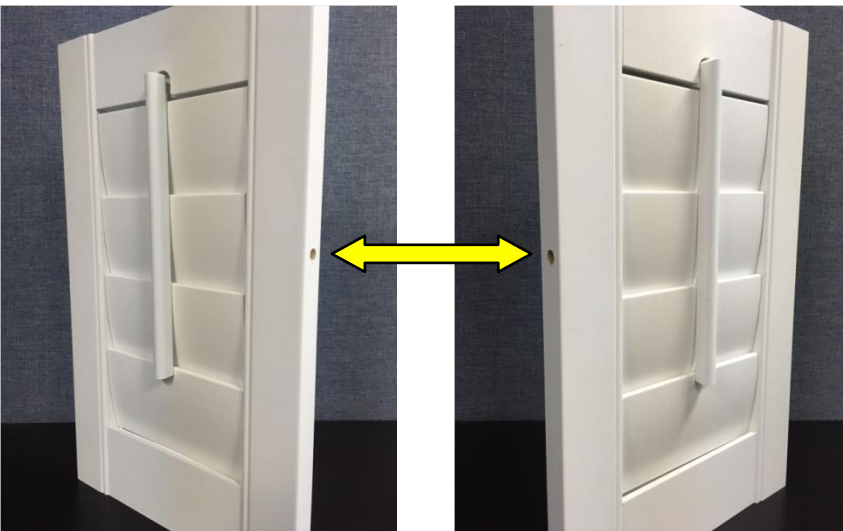

Step 3: All panels have tension holes on BOTH sides of the panel. BOTH sides of panel should be tensioned evenly and not just one side.